




HOW TO USE YOUR TINYTAG DATA LOGGER

1. INSTALLATION 2. CONFIGURATION 3. POSITIONING 4. RETRIEVAL

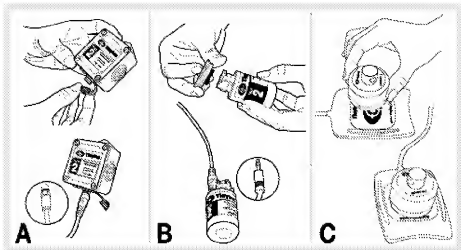

Connecting a Data Logger

The diagram above shows 3 loggers (Tinytag Talk 2, Plus 2, Aquatic 2), each with a different type of connection.

Identify which connection matches your logger and follow the connection instructions below:

A – Unscrew the protective cap from the socket. Insert the plug into the socket and rotate until it slots into place, then push the plug firmly into the socket.

B – Carefully remove the lid from the logger and plug the cable into the socket.

C – Place the logger onto the inductive pad. Connection with the software should be established automatically. Do not position the pad on top of electrical equipment such as a PC or monitor, or on metal surfaces. This will disrupt communications between the pad and the data logger.

Enter your email here for news and updates on Tinytag products.

Email

Previous | 2 of 3 | Next